

Dual Temperature Swichgage[®] Model Series MDTM89

Murphy's model MDTM89 is an electronic, dualtemperature monitor. It monitors two thermocouples, displays the temperature of the thermocouple selected and has adjustable trip points for each input. A toggle switch provides for selection of the thermocouple to be displayed and/or the temperature trip point to be checked/adjusted. If either trip point is reached, the associated output turns on and can be used as a control signal or to initiate alarms and/or shutdown. A Push to Read button, located below the selector switch, allows the operator to check the trip point and to see its value as adjustments are made. Two potentiometers, one on each side of the thermocouple selector switch, are provided for field adjustment of the trip points.

There are four basic models. Two of the models are powered by capacitor discharge ignition and have either an FET or an SCR output. One model operates from 12or 24-VDC and has an FET output. Standard display is in degrees Fahrenheit; degrees Celsius is optional.

Applications

Applications include the following:

- Compressor suction/discharge temperature
- Engine/compressor jacket water temperature
- Engine exhaust temperature
- Compressor cylinder temperature
- After cooler temperature
- Bearing temperature

Thermocouple Type

Either J or K type UNGROUNDED THERMOCOUPLE is accepted. Specify type in part number for each MDTM89 unit (see How to Order). Order thermocouples as a separate item.

Continuous & Trip Point Display

The selector switch is used to choose the thermocouple or trip point temperature to be displayed. The selected temperature is continuously displayed during normal operation. Depressing the Push to Read push button displays the trip point temperature of the selected thermocouple.



1 When used with approved ignition or 12-24 VDC. Contact Enovation Controls for details.

2 Approved for CD ignition, 80–250 VDC

Open Thermocouple Input

An open thermocouple input forces the monitor into upscale overrange. The monitor indicates an overrange by displaying the numeral 1 in the left most digit of the display. An overrange will turn on the high trip point output.

Trip Point Operation

Monitored trip points are independent of the thermocouple selector switch. Both set points are always active.

When the thermocouple temperature reaches the trip point temperature, the MDTM89 is triggered. After approximately 0.5 seconds the trip point output turns on.

Trip points are set by depressing the Push to Read push button while rotating a trip point potentiometer until the desired trip point temperature is displayed.

Automatic Cold Junction

Cold junction reference point compensation is an integral feature of the monitor. The compensator circuit monitors case temperature and automatically compensates for changes in ambient temperatures. Compensation will allow maximum of 2 degrees change in the temperature reading from 32° to 122°F (0° to 50°C).

In order to consistently bring you the highest quality, full-featured products, we reserve the right to change our specifications and designs at any time. MURPHY products and the Murphy logo are registered and/or common law trademarks of Enovation Controls, LLC. This document, including textual matter and illustrations, is copyright protected by Enovation Controls, LLC, with all rights reserved. (c) 2015 Enovation Controls, LLC. A copy of the warranty may be viewed or printed by going to http://fwmurphy.com/warranty.

Specifications

Power Requirements (Operating Voltages):

MDTM89-A: 100 to 350* VDC, CD ignition, negative ground (FET outputs)

MDTM89-E: 100 to 350*, CD ignition, negative ground (FET outputs)

MDTM89-B: 100 to 350* VDC, CD ignition, negative or positive ground (SCR outputs)

MDTM89-C: 12 to 24* VDC, negative ground, 15 milliwatts (FET outputs)

Power Consumption: CD ignition: 350 µa @ 100V; 120 VAC: 0.6 watts; 24 VDC: 0.5 watts

Outputs:

Model B: output turns on above trip point; output turns off when power is switched off; two (2) isolated SCR outputs, 0.5 amp @250 VDC

Models A, C and D: output turns on above trip point; output turns off below trip point; two (2) isolated FET outputs, 0.5 amp @ 250 VDC

Model E: output one turns on above trip point, output turns off below trip point: output 2 turns on below trip point, output turns off above trip point: two (2) isolated FET outputs, 0.5 amp @ 250 VDC

Ambient Cold Junction Compensation Range: 32° to 122°F (1°C from 0° to 50°C)

Operating Temperature: -4° to 158°F (-20° to 70°C) **Storage Temperature:** -40° to 300°F (-40° to 150°C) **Case:** Die cast aluminum

Reset Differential: FET models: Decreases 3° (°F or °C). SCR model: turn input power off to reset.

Measurement Range: Monitor Range 0°-1999°F or °C (specify F or C in part number)

Accuracy: With J-type thermocouple: from $150^{\circ}-1200^{\circ}F$ (66°-649°C) $\pm 1.5\%$ of reading. With K-type thermocouple: from $400^{\circ}-2000^{\circ}F$ (204°-1076°C) $\pm 1.5\%$ of reading. At calibration temperature.

Laboratory Approvals: CSA† and Factory Mutual* approved for Class I, Division 2, Group D, hazardous locations).

Thermocouple Lead Length: 150 ohm lead resistance affects monitor accuracy less than 1°

Trip Point Accuracy: ±3°F (±2°C) of reading **Trip Point Adjustment Range:** 0-1999 Degrees


Shipping Weight: 48 oz. (1.4 kg)

Shipping Dimensions: 10 x 9-1/2 x 6 in. (254 x 241 x 152 mm)

* Approved for CD ignition, 80–250 VDC.

* When used with approved ignitions or 12-24 VDC. Contact Enovation Controls for details.

Dimensions

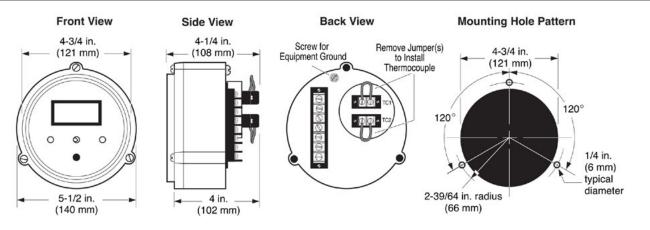


MDTM89 Interface Capabilities

Model	Power Source	Rating
LCDT	CD Ign., 120 VAC, 12/24 VDC	Cl.I, Div. 1, Gr. D, Haz areas*
S1501	120 VAC or 12/24 VDC	Cl.I, Div. 1, Gr. D, Haz areas*
TTD	CD lgn., 12/24 VDC	Cl.I, Div. 2, Gr. D, Haz areas**
TATTLETALE®	CD Ign., 120 VAC, 12/24 VDC	Non-Hazardous areas
PLCs, various Non-Murphy annuncia	tors - contact Enovation Controls.	
* An isolation barrier is needed between the MDTM89 and an Annunciator rated for Class I, Division 1, Group D, Hazardous areas.		
** When used with approved ignition. Contact	t Enovation Controls for details.	

How to Order

Options listed below. All configurations may not be available. Call your sales representative or Enovation Controls for more information.

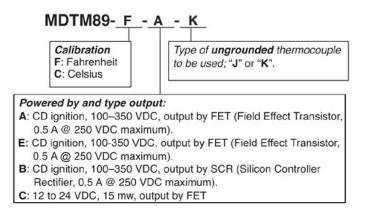

This Page Has Intentionally Been Left Blank